

 
# SPLATTER GUARD

33-04-400


# ARGCO

The Splatter Guard is designed to fit the Ridgid 300 Power Drive Complete.

1. The splatter guard is mounted on the front of the machine beneath the bottom of the tri-stand. Working from beneath the tri-stand, install the machine bracket (#1) with the 7" square tube pointing to the rear of the machine (bolt holes positioned to the front)
2. Remove the (2) existing front bolts and nuts which hold the power drive onto the tri-stand and replace them with (2) 3/8" x 16 x 2-1/2" bolts, lock washers and nuts (supplied) and secure the machine bracket (#1) in place for permanent use.
3. Open the lid of the splatter guard and lock the hinges in place.
4. Slide funnel support bracket (#2) all the way into machine bracket (#1)

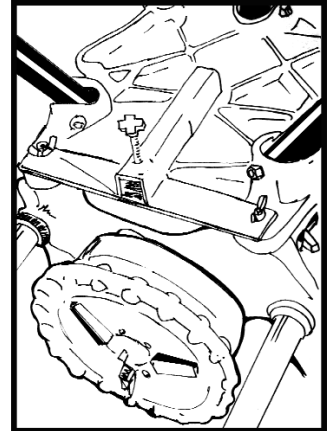

 View of machine bracket installed to the bottom of the tri-stand

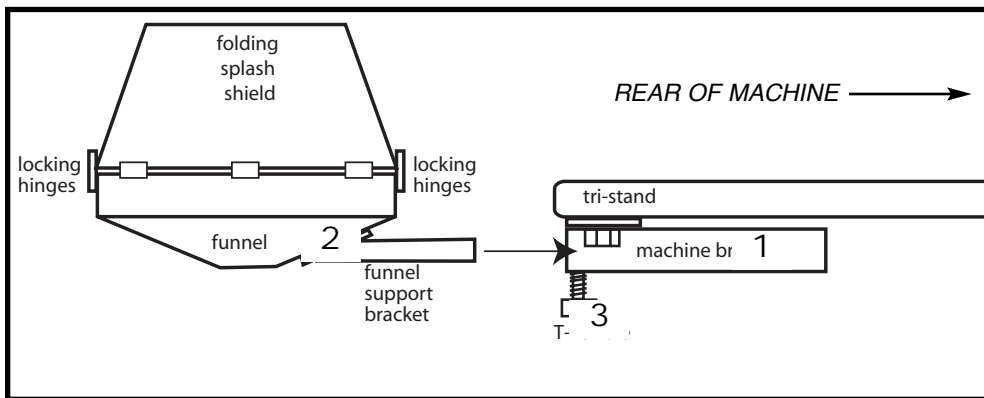


5. Tighten the 4-prong bolt handle (#3) securely to hold the splatter guard firmly onto the machine.
6. Place the oiler under the opening below the splatter guard.
7. You are now ready to begin operating the threading machine.

*Your splatter guard allows you to work in any environment and keep oil and debris from spraying...and aiming the oil to drip directly into the oil bucket.*

### **Before moving your threading machine, remove splatter guard**

 To remove the splatter guard, simply loosen the 4-prong bolt handle and slide splatter guard out from the bracket. Machine bracket (#1) remains on the tri-stand.

Note: Remove the splatter guard when un-screwing (backing-off) fittings from pipe.

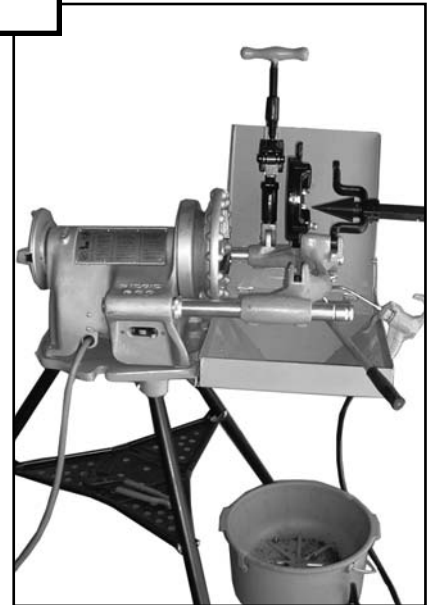

**argco.com**  
**800-854-1015**



**GUARANTEED**

RIDGID® is a trademark of RIDGID, Inc.  
The trade dress of the RIDGID® Model 300 Power Drive product is a trademark of RIDGID, Inc.