

# data sheet

## **ARGCO**



### **PT PORTABLE ROLL GROOVING ATTACHMENT**

**PT** Roll Grooving Attachment for Ridgid 300 Machine (**1-1/4" to 12" Capacity**)

**Comes stock:** 2" to 6" roller & shaft (sch. 40 & thin wall)

•**OPTIONAL:** 1-1/4" to 1-1/2" roller & shaft (sch. 40 & thin wall)

•**OPTIONAL:** 8" to 12" roller & shaft (thin wall up to sch. 20)

3309100: **2-6" Sch. 40**

3309101: **1-1/4"-6" (4-6" sch. 20 and 1-1/4" to 3" sch. 40)**

3309102: **8"-12" Sch. 20**

3309103: **1-1/4" to 12" (Sch 40 to 6") (8"-12" SCH 20)**



**"The Most Versatile  
Grooving Tool at the  
Best Price!"**

#### OPERATING INSTRUCTIONS:

1. Mount groover on power machine; pulling support arms through mounting tubes
2. Level pipe in grooving position
3. Facing machine, groover must run counter-clockwise. Standing on the right side of the power machine.
4. Pulling ratchet with right hand, insert pipe between rollers touching shoulder of lower shaft.
5. When rollers meet pipe, pipe will start rotating counter-clockwise, pull pipe off center 5° toward operator, start groove by applying ratchet pressure each rotation of pipe.

#### TO CHANGE ROLLERS:

Loosen Upper roller set screw. Unscrew grease fitting completely. Remove roller and replace with new roller. Replace grease fitting and tighten. Tighten set screw.


#### TO CHANGE SHAFTS:

Loosen set screws on front and back bearing (4 screws). Remove shaft and replace with new shaft. Tighten all 4 set screws.

Ridgid® is a registered trademark of the Ridge Tool Company

The information contained herein is produced in good faith and is believed to be reliable but is for guidance only. ARGCO and its agents cannot assume liability or responsibility for results obtained in the use of its product by persons whose methods are outside or beyond our control. It is the user's responsibility to determine the suitability of any of the products, methods of use, or preparation prior to use, mentioned in our literature. It is the user's responsibility to observe and adapt such precautions as may be advisable for the protection of personnel and property in the handling and use of any of our products.

**FOR MORE INFORMATION CALL ARGCO AT 1-800-854-1015  
OR LOG ONTO WWW.ARGCO.COM**

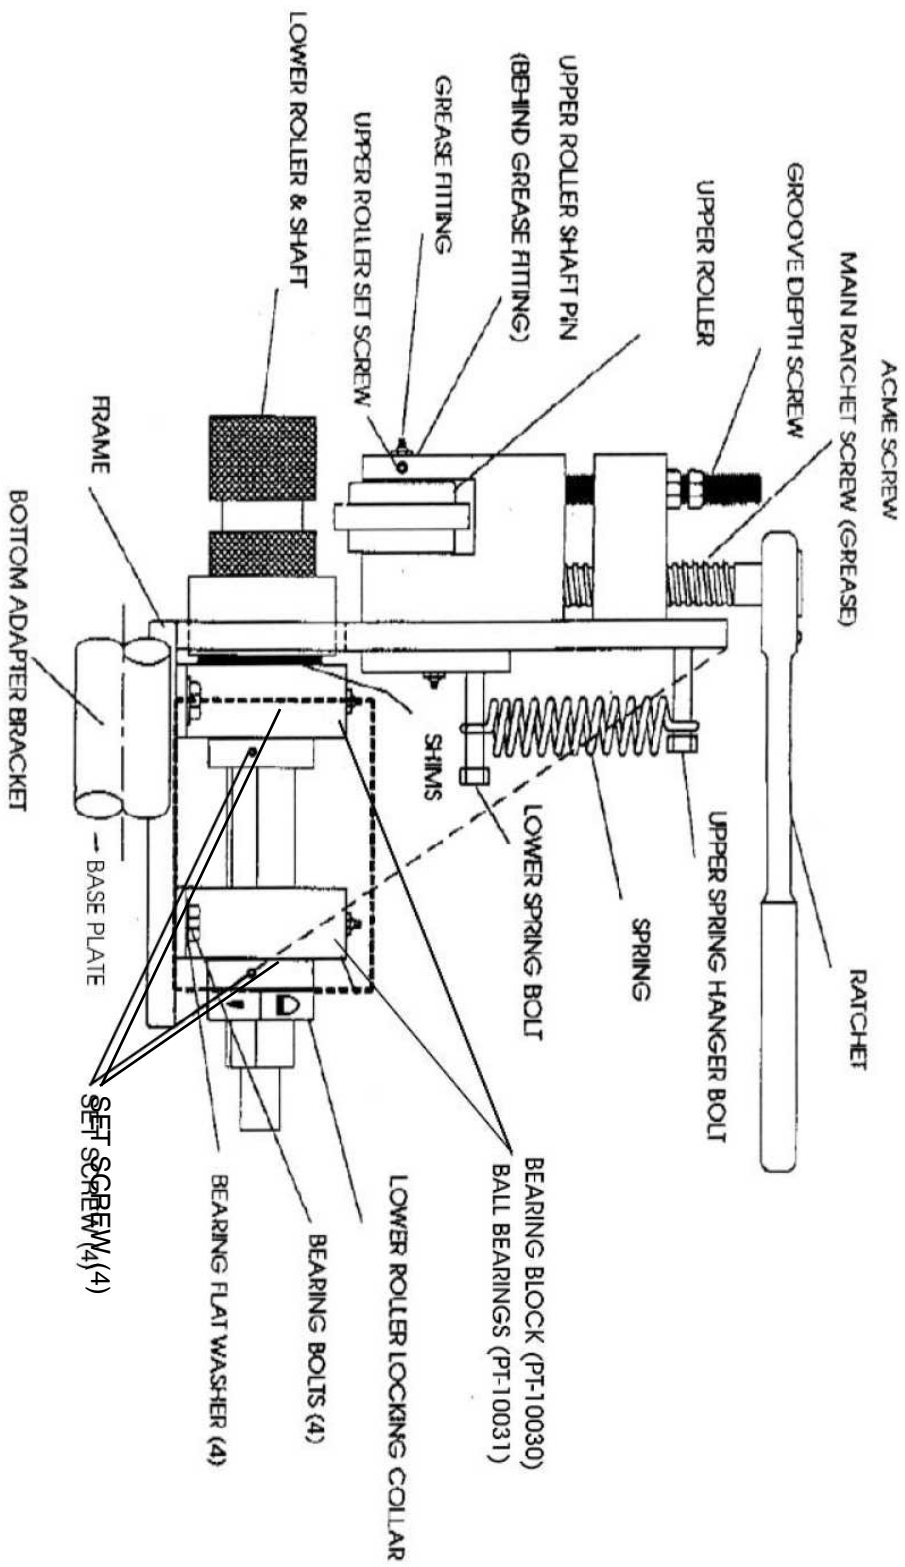

# parts list

## **ARGCO**



### **PT PORTABLE ROLL GROOVING ATTACHMENT**

<b>3309100</b>	<b>ROLL GROOVER (2-6" SCH 40) Fits RIDGID® 300</b>
3309100A	ROLL GROOVER SHAFT 2"-6"
3309100B	ROLL GROOVER ROLLER&SHAFT SET 2"-6"
3309100C	ROLL GROOVER UPPER ROLLER 2"-6"
3309100D	ROLL GROOVER SHAFT 1-1/4"-1-1/2"
3309100E	ROLL GROOVER ROLLER & SHAFT SET 1-1/4"-1-1/2"
<b>3309101</b>	<b>ROLL GROOVER 1-1/4"-6" (4-6" sch20 and 1-1/4 to 3" sch40) Fits Ridgid 300</b>
3309101A	ROLL GROOVER SHAFT 1-1/4"-6"
3309101B	ROLL GROOVER ROLLER & SHAFT SET 1-1/4"-6"
3309101C	ROLL GROOVER UPPER ROLLER 1-1/4" - 6"
<b>3309102</b>	<b>ROLL GROOVER (8"-12" SCH 20) Fits RIDGID® 300</b>
3309102A	ROLL GROOVER SHAFT 8"-12" (SCH 20)
3309102B	ROLL GROOVER ROLLER & SHAFT SET 8 - 12"(SCH 20)
3309102C	ROLL GROOVER UPPER ROLLER 8-12"
<b>3309103</b>	<b>ROLL GROOVER 1-1/4" to 12" (SCH 40 to 6") (8"-12"SCH 20) Fits RIDGID® 300</b>
3309103A	ROLL GROOVER 1-1/4-12" SCH 40 TO 3" 4-12"SCH 20 F/RIDGID 300
3309104	ROLL GROOVER BOTTOM SHAFT FOR USE WITH RIDGID®535
3309105	ROLL GROOVER METAL CARRYING BOX
3309106	ROLL GROOVER WRENCH
3309108	ROLL GROOVER MAIN SPRING
3309109	ROLL GROOVER UPPER SPRING HANGER BOLT
3309110	ROLL GROOVER GREASE FITTING
3309111	ROLL GROOVER UPPER ROLLER SET SCREW
3309112	ROLL GROOVER SHEAR PIN
3309113	ROLL GROOVER MAIN RATCHET SCREW
3309114	ROLL GROOVER PILLOW BLOCK ASSY W/BEARINGS
3309115	ROLL GROOVER LOWER ROLLER LOCKING COLLAR
3309116	ROLL GROOVER UPPER ROLLER SHAFT PIN
3309117	ROLL GROOVER DEPTH ADJUSTMENT SCREW

Ridgid® is a registered trademark of the Ridge Tool Company

The information contained herein is produced in good faith and is believed to be reliable but is for guidance only. ARGCO and its agents cannot assume liability or responsibility for results obtained in the use of its product by persons whose methods are outside or beyond our control. It is the user's responsibility to determine the suitability of any of the products, methods of use, or preparation prior to use, mentioned in our literature. It is the user's responsibility to observe and adapt such precautions as may be advisable for the protection of personnel and property in the handling and use of any of our products.

**FOR MORE INFORMATION CALL ARGCO AT 1-800-854-1015  
OR LOG ONTO WWW.ARGCO.COM**